



RUBY 2000 Juice Extractor

NUTRIFASTER
FOOD SERVICE EQUIPMENT

Unit 7, 62-66 Newton Road, Wetherill Park, NSW 2164
P 02 97292011 | F 02 97292012 | E Info@nutrifaster.com.au

CARE & CLEANING INSTRUCTIONS

Follow these simple steps:

1

Find a suitable container that you can soak your filter in. It will be a good idea if you obtain one solely for this purpose.
**container size: approx 33cm in diameter and 25cm deep.*



2

In about 4-5 Litres of HOT water, dissolve 250grams (2 ½ scoops) of **DET10** Cleaner/Sanitiser (or) Chlorinated dishwashing powder, as recommended by manufacturer/supplier.



3

Rinse your filter under a stream of water removing as much of the pulp stuck to it as possible. Submerge the filter directly into the solution. It is important that you **do not** scrub or brush the filter with any abrasive materials or cleaning aids. Allow it to **Soak Overnight**



4

In the morning, wipe over the filter basket using a sponge or kitchen cloth then thoroughly rinse it under running water.



5

Ensure to follow these instructions after each day the juicer is used to avoid residue build up on your filter. For best results, it's important to ensure to make a fresh batch of solution every 4 to 5 days



Note: you may also clean the blade, lock nut & collection pan in this solution to remove any build up and staining.



DET10 Cleaner / Sanitiser (10kg drum) can be purchased from **Nutrifaster** – Ph. 02 9729 2011 or order by Email: info@nutrifaster.com.au





Best practice



Do Not

Soak the filter basket every night in cleaner sanitizer solution

Always use quality fruit and veg, such as 'juicing carrots' for best yield output and superior taste.

If your machine vibrates or wobbles badly, clean out filter basket, if it happens regularly, review your cleaning procedures.

If your juicer clogs up after 1 or 2 juices your basket has not been cleaned properly or your cutter blade needs sharpening.
Contact your local reseller or Nutrifaster

Suggestion: Have your filter basket serviced/reconditioned every 6-12 months. *(based on usage)*

Suggestion: Resharpener the cutter blade every 6-12 months.
**This can be done 3 max 4 times in it's life*

If your juicer makes a loud grinding noise, your bearing assembly may need replacing.

Do not over-tighten the latches, they only hold down the lid.

Do not use scourers, brushes, abrasive cleaning aids or steel wool to clean filter basket.

Do not place filter basket or top cover into a dishwasher as the harsh chemicals and heat will over time corrode them.

It's recommended **not** to juice; kale, spinach, baby spinach, silverbeet or similar green produce as this will likely clog up your filter basket.
*Ensure to use a suitable cold press juice extractor, for optimal results ask for the **LB33 wheatgrass juicer*** (or alike)*

Do not leave your filter basket in an area where it can be damaged.

Do not block the air flow of juicer, (ie. blocking the exhaust tube or the holes on the lid).

When juicing let the machine do its work, do not force feed fruits and veg into the juicer.

IMPORTANT:

For best results, please ensure to rigorously adhere to the outlined cleaning instructions. If your juicer is not performing as it should, you're required to contact Nutrifaster at once.

Happy Juicing



Should you require parts, service or technical assistance:



02 9729 2011 | business hrs [all enquiries]
0404 878 461 | after hrs [emergencies only]
service@nutrifaster.com.au

