

## HOT WATER URNS

### WARNING

Caution should be exercised with appliances employing heat.

### OPERATING INSTRUCTIONS

1. One appliance per power outlet.
2. Uncoil the cord and connect to a suitable power outlet.  
Make sure the cord does not come in contact with hot surfaces.
3. Fill the urn with water (see specification chart for approximately boiling times from cold water start).
4. When the water boils turn the temperature control to required setting and allow to boil. Remember that constant use at high temperature will rapidly evaporate the water causing the unit to boil dry, in all cases it will be necessary to regularly check the water level to ensure that this unit does not boil dry.

### CLEANING INSTRUCTIONS

1. Turn off, unplug and allow to cool
2. Empty water.
3. Wipe the lid, interior and exterior with a damp cloth. **DO NOT IMMERSE IN WATER.**
4. Recoil the cord.

### SPECIFICATIONS

CAPACITY	POWER REQUIREMENT	APPROX BOIL TIME FROM COLD WATER
10 Lt/40 Cup	2400Watt 240Volts AC	25 Minutes
20 Lt/80 Cup	2400Watt 240Volts AC	50 Minutes
30-40 Lt/ 120-160 Cup	2400Watt 240Volts AC	1 Hour 25 Minutes