

SEMAK

COMMERCIAL CONVEYOR TOASTER – CT450

OPERATION AND WARRANTY BOOKLET



SEMAK AUSTRALIA: FACTORY 18, 87-91 HALLAM SOUTH ROAD, HALLAM VIC 3803

PH +61 3 9796 4583

FAX +61 3 9796 4586

WEB WWW.SEMAK.COM.AU

Table of Contents

General Safety Instructions for All Semak Products.....	4
Safety Instructions	5
Installation Instructions	6
Operating Instructions	8
Cleaning Instructions	9
Service & Maintenance.....	10
Electrical Compliance.....	10
Warranty.....	10
WARRANTY REGISTRATION.....	12

WARNING: PLEASE ENSURE THAT ALL SAFETY INSTRUCTIONS ARE UNDERSTOOD BY ALL PERSONS WHO USE THIS APPLIANCE

Arabic

تحذير: تأكد من فهم كل من يستعمل الجهاز لكافة إحتياطات الأمان وتعليمات التشغيل .

Cambodian

ការព្រមានច្របូ: សូមប្រាកដឲ្យបានច្បាស់ថាការប្រុងប្រយ័ត្នផ្នែកនិរតី និងរបៀបប្រើទាំងអស់ បានត្រូវតាមច្បាប់ច្បាស់លាស់ ល្អ ទៅដល់អ្នកដែលប្រើត្រឡប់ម្តងម្កាលនេះហើយ ។

Chinese

警告：必需確保任何使用這器具的人士，已明瞭一切安全預防措施及操作指示。

Croatian

Upozorenje: Budite sigurni da svi koji rade na aparatima znaju o mjerama opreza i funkciji ovih aparata.

French

Attention: Veuillez vous assurer que toutes les personnes utilisant l'appareil comprennent tous les conseils d'utilisation et précautions de sécurité.

German

Warnung: Versichern Sie sich, daß alle Sicherheitsvorkehrungen und Bedienungsanleitungen von allen Benutzern des Gerätes verstanden worden sind.

Greek

Προειδοποίηση: Βεβαιωθείτε ότι όλα τα προφυλακτικά μέτρα ασφαλείας και οι οδηγίες λειτουργίας κατανοούνται από όλα τα άτομα που χρησιμοποιούν τη συσκευή.

Italian

Attenzione: assicuratevi che tutti coloro che adoperano i macchinari conoscano le misure di sicurezza e le istruzioni relative al funzionamento.

Macedonian

Предупредување: Осигурајте сите оние кои користат апарати ги разбираат мерките за безбедност и упатства за работа.

Malay

Amaran: Pastikan bahawa semua langkah keselamatan dan keterangan operasi telah difahami oleh semua pengguna alat ini.

Polish

Ostrzeżenie: upewnij się, że wszystkie środki ostrożności i instrukcje obsługi są rozumiane przez wszystkich używających tego urządzenia.

Portugese

Atenção: Assegure-se de que todas as medidas de segurança e instruções de funcionamento são compreendidas por todos aqueles que usam este aparelho.

Russian

Предупреждение: Позаботьтесь о том, чтобы меры безопасности и инструкции по эксплуатации были поняты всеми, кто пользуется этим устройством.

Serbian

Упозорење: Водите рачуна да сви који употребљавају овај уређај знају мере предострожности и упутства за руковање.

Spanish

Advertencia: Haga que las precauciones e instrucciones para el uso de este aparato sean entendidas por todos los que lo usan.

Tagalog

Babala: Siguruhing ang lahat nu mga pangkaligtasang pag-iingat at mga tagubilin hinggil sa pagpapaandar ay naiintindihan ng lahat ng gumagamit ng kasangkapan.

Turkish

Uyarı: Tüm güvenlik önlemlerinin ve aygıtı çalıştırma talimatlarının aygıtı kullanan herkes tarafından anlaşılması sağlanmalıdır.

Vietnamese

Lưu ý: Chắc chắn rằng những người sử dụng máy đều đã hiểu rõ tất cả các chỉ dẫn về cách vận hành máy và các dự phòng an toàn.

General Safety Instructions for All Semak Products

- Do not use the appliance for other than its intended use.
- Never leave the appliance unattended when in use.
- The appliance should not be used by children or infirm persons and close supervision is necessary when used near such persons.
- Always switch off at power outlet before removing the plug. Remove by holding the plug – do not pull the cord.
- When the appliance is not in use, or prior to cleaning, always switch off the power and remove the plug.
- To avoid the risk of electric shock, do not immerse the plug, cord or any part of the appliance in water or any other liquid.
- Do not use near a stove or heat source and do not let the cord come in contact with any hot surface.
- Do not use the appliance with an extension cord unless that cord has been checked and tested by a qualified technician or if it is an extension cord that has been manufactured by a reliable electrical goods manufacturer and has not been altered in any way.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in anyway. Return to Semak or an authorised service agent for repair.
- CAUTION Hot Surfaces.
- NEVER leave the appliance ON unattended. ALWAYS unplug the cooker after use.

Safety Instructions

- Plug toaster into a properly grounded electrical outlet of the correct voltage, size, and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size, and install the proper electrical outlet.
- To avoid any injury, turn the power switch off, unplug the unit from the power source and allow to cool before performing any maintenance.
- For safe and proper operation, the unit must be located at a reasonable distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur. Do not locate toaster under shelving or closer than 12" (31 cm) from the ceiling.
- Allow a minimum of 1" (3cm) clearance along the sides. Allow a clearance of 12" (31cm) along front and rear discharge to ensure proper operation & safety.
- To prevent any injury or damage do not pull unit by power cord
- To prevent any injury, discontinue use if power cord is frayed or worn.
- Locate the unit at the proper counter height, in an area that is convenient for use. The location should be level to prevent the unit or its contents from accidentally falling, and strong enough to support the weight of the unit.
- Do not place anything on top of the toaster; doing so could damage toaster or subject personnel to possible injury.
- The toasting of coated or buttered products such as garlic bread, cheese sandwiches and sweet rolls is NOT recommended. Residue will reduce toaster performance and could possibly ignite inside the toaster.
- When setting up the unit for operation, make sure power to the unit is off and the toaster is at room temperature. Failure to do so could result in injury.
- To avoid damage to the unit or injury to personnel always operate toaster with crumb tray installed, and do not remove for cleaning until toaster is cool.
- Unit is not weatherproof. For safe operation locate unit indoors where ambient air temperature is a minimum of 70°F(21 °C) & a maximum of 85°F(29°C).
- Do not locate the toaster in an area subject to excessive temperature or grease from grills, fryers, etc. Excessive temperature could cause damage to the unit. Do not place toaster in an area that restricts air flow around the front or rear of the unit. Do not place toaster in direct discharge path of air conditioning vent or makeup air vent.
- Use only non-abrasive cleaners. Abrasive cleaners may scratch the finish of your toaster marring its appearance and making it susceptible to oil accumulation.

Installation Instructions

Unpacking

1. Remove unit and all packing materials from shipping carton.
2. Open the large box. Remove all packing materials and protective covering from the unit and parts.
3. Remove tape from discharge chute, crumb tray and toast collector pan.
4. If unit is not level, use 9/16" (14cm) open-end wrench to adjust the foot of each leg until unit is level.

Location

CAUTIONS

- Do not locate the toaster in an area subject to excessive temperatures or grease from grills/fryers. Excessive temperatures may cause damage to unit.
- Do not place toaster in an area that restricts air flow around the front/rear of the unit. Do not place toaster in direct discharge path of air conditioning vent.
- Locate the unit at the proper counter height, in an area that is convenient for use. The location should be level to prevent the unit or its contents from accidentally falling, and strong enough to support the weight of the unit.
- Do not place anything on top of the toaster; doing so could damage toaster or subject personnel to possible injury.

WARNING

- For safe and proper operation, the unit must be located a reasonable distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur. Do not locate toaster under shelving or closer than 12" (31cm) from the ceiling.
- Allow a minimum of 1" (3cm) clearance along the sides. Allow clearance of 12" (31cm) along front and rear discharge to ensure proper operation and safety.

Set-up

CAUTIONS

- Unit is not weatherproof. For safe and proper operation locate the unit indoors where the ambient air temperature is a minimum of 70°F(21°C) and a maximum of 85°F(25°C).
- The toasting of coated or buttered products such as garlic bread, cheese sandwiches and sweet rolls is NOT recommended. Residue will reduce toaster performance and could possibly ignite inside the toaster.
- When setting up the unit for operation, make sure power to the unit is off and the toaster is at room temperature. Failure to do so could result in injury.

Toast Feed Ramp

The toast feed ramp is installed at the factory and can be used in two positions.

- 1) When in the upright position, the toaster is set for automatic feed. Bread products enter the toaster by placing them on the feed ramp and releasing.
- 2) For manual feeding of product, tip the feed ramp until it rests on top of the unit. In this position bread products can be manually loaded by placing them directly on the conveyor belt.

CAUTIONS

- Some exterior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.

Toast Crumb Tray

Install toast crumb tray directly below the conveyor belt and below the stop pins. Insert until the front of the crumb tray meets the stop pins.

CAUTIONS

- To avoid damage to the unit or injury to personnel always operate toaster with crumb tray installed.
- To avoid injury, do not remove the crumb tray for cleaning until toaster is cool.

Front / Rear Discharge

The toaster can be configured to discharge in the front or rear. User can pull up the rear discharge door for front discharge and push down the rear discharge door for rear discharge.

CAUTION

- To avoid injury, do not remove the crumb tray for cleaning until toaster is cool.

Operating Instructions

For Model Equipped with rocker switch

- 1) Plug toaster into a properly grounded electrical outlet of the correct voltage, size and plug configuration. (See the Rating Label)
- 2) Place the On/Off switch in the On position.
- 3) Turn the Color Control to the lightest position while the unit heats up. (Note: Allow approximately 15 to 21 minutes for a warm-up period.)
- 4) After warm-up period, set the Color Control to the medium position and toast two slices of bread product then re-adjust the Color Control to the desired setting. (Note: To toast moist products such as English Muffins, rye bread or whole wheat, slow the conveyor by turning the Color Control knob to a darker setting (clockwise)).

For Model Equipped with rotary selector

- 1) Plug toaster into a properly grounded electrical outlet of the correct voltage, size and plug configuration. (See the Rating Label)
- 2) Rotate the Rotary switch in the high-heat position.
- 3) Turn the Color Control to the lightest position while the unit heats up. (Note: Allow approximately 15 to 20 minutes for a warm-up period.)
- 4) After warm-up period, set Color Control to the medium position and toast two slices of bread product then re-adjust the Color Control to the desired setting. (Note: To toast moist products such as English Muffins, rye bread or whole wheat, slow the conveyor by turning the Color Control knob to a darker setting (clockwise)).
- 5) This unit can be used for one sided toasting, such as buns and English Muffins by rotating the rotary switch to the top side heat only (buns).

Power Save Mode

Selected this toaster can go into a Power Save Mode by turning the rotary selector into Power Save Mode. The toaster is operating at 25% power.

(Note: To place toaster back into full operation turn the selector back in to TOAST. Unit is back up to full power within 5 minutes.)

Cleaning Instructions

Exterior

To preserve the bright finish of the unit, it is recommended that the exterior surfaces be wiped daily with a damp cloth. Stubborn stains may be removed with a good stainless steel cleaner or on-abrasive cleaner. Hard to reach areas should be cleaned with a small brush and mild soap.

CAUTION

USE ONLY NON-ABRASIVE CLEANERS. ABRASIVE CLEANERS COULD SCRATCH THE FINISH OF YOUR TOASTER MARRING ITS APPEARANCE AND MAKING IT SUSCEPTIBLE TO SOIL ACCUMULATION

Toast Crumb Tray & Toast Collector Pan

Remove from unit and wash with soap and water, then rinse.

Toast Feed Ramp

Press in the two wire spokes and remove guide form unit. Wipe clean with a soft, damp cloth or soak the guide in a mild solution of 1 cup ammonia and 1 gallon of water (227 milliliters and 3.785 liters). Re-install guide by aligning wire spokes with holes in toaster.

Service & Maintenance

For Service and Repair, contact Semak for your nearest Authorised Service Agent

The Foodservice Industry is deemed a hostile environment within the scope of AS/NZS 3760:2003. Semak Commercial Conveyor Toasters MUST be routinely electrically tested for compliance with this standard if used commercially.

It is recommended that a Food Safety program such as HACCP be employed and that routine service and repair be undertaken at the time of electrical testing to ensure the correct operation and function of all parts.

Electrical Compliance

Semak Commercial Conveyor Toasters comply with the following electrical standards



IEC 60335-2-14:1997 Electrical Safety



CISPR14-1:2000 Electromagnetic Compatibility

Warranty

The Semak Commercial Conveyor Toaster is a Commercial appliance. This product is guaranteed for 1 Year from the date of purchase against mechanical and electrical defects. If the fault is deemed caused by MISUSE/ABUSE the terms of the warranty are invalidated. If the product has been opened or tampered with (ie. In an attempt to repair it) the warranty is invalidated. All warranty repairs should be undertaken by Semak Australia.

It is against company policy to authorize warranty repairs over the phone. Service Agents will require a work order number from Semak to conduct warranty repairs.

SEMAK® WARRANTY

THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED AND SOLD IN AUSTRALIA

The benefits conferred by this warranty are an alternative to all other rights and remedies in respect of the product which the consumer has under the Trade Practices Act and similar State and Territory Laws.

Semak Australia. Warrant each new SEMAK appliance manufactured by SEMAK to be free from defects in materials or manufacturing process for a period of 2 years from the date of original purchase.

Should defects due to faulty materials or manufacturing process develop within the warranty period, the appliance will be repaired without charge providing all conditions of this warranty are observed.

1. Proof of Purchase and Warranty card must be retained and available on request.
2. This Warranty is void if the equipment has been damaged due to misuses neglect or is used for a purpose for which it was not suited; and no repairs, alterations or modifications have been attempted by other than Semak or its authorised Service Agent.
3. Semak Australia. Reserves the right to reject a claim for warranty if service is required due to misapplication, improper installation, inadequate wiring, and incorrect voltage conditions. Under no circumstances shall SEMAK or its agents bear responsibility for consequential damages of any kind.
4. Where required by Statute or local authority, equipment must be installed by qualified person in accordance with all relevant regulations. Failure to do this will void product warranty.
5. Cost of transport of any appliance or part to and from SEMAK or its Service Agent is to be paid by the owner.
6. A charge will be made where failure is due to neglect, abuse or accidental damage on the part of the operator, or when no fault can be found or the fault is due to causes outside the control of Semak Australia.
7. The above does not preclude the purchaser from their Statutory rights as a consumer.

Semak Australia
Factory 18
87-91 Hallam South Road
HALLAM VIC 3803
Ph 61 3 9796 4583
Fax 613 9796 4586
Email technical@semak.com.au

WARRANTY REGISTRATION

Retain for Future Reference

DO NOT SEND

Please complete one registration for each Semak appliance.

You may be required to provide this information when requesting after sales service. Please staple your proof of purchase to this page.

Company Name: _____

Company Address: _____

Business Type: _____

Contact: _____

Phone: _____

Fax: _____

Email: _____

Product: _____

Serial Number: _____

Date of Purchase: _____

Place of Purchase: _____